

My DiSa USB-Datasafe

Instruction Manual



Application:


Use My DiSa USB-Datasafe for saving your data. It consists of 2 partitions. Partition 1, system partition (please do not delete) and partition 2, user partition. Unlock the Stick with preinstalled software and lock it with your own new password. Removing stick from drive device will lock automatically. **Automatically locking will be deactivated when "permanent unlock" is chosen.**

Using:

- Put USB-device in according drive
- My DiSa Software starts automatically
- Please note software adjusting takes a couple of minutes till programm starts.
- The software automatically detects setted language in pc or notebook and take it over to the software.
- Choose button „set new password“.



- Choose your own personal password incl. identical repetition. Depending on chosen safety level of your personal password background will change the color.
1-3 tags – red = low security level
4-7 tags – yellow = mid. security level
From 8 tags – green = max. security level.

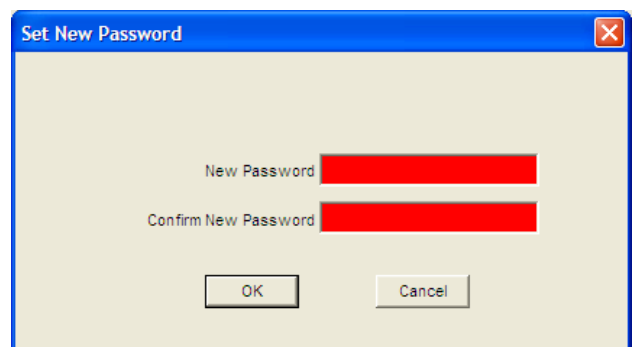

- Confirm with „OK“.

DISA DIGITAL SAFETY GmbH

Lyoner Straße 48 ■ D-60528 Frankfurt am Main
 Managing Director: Uwe Bremeyer ■ HRB: 82548 AG Frankfurt / Main
 Tax no. 45 239 3840 1 ■ USt-ID Nr.: DE814955917
 Fortis Bank KTO-Nr.: 1120 1911 57 ■ BLZ 370 106 00
 SWIFT/BIC: GEBADE33 ■ IBAN: DE59 3701 0600 1120 1911 57



- Opened and green colored lock shows available access on flash.



- To lock MyDiSa USB-Datasafe, enter your personal password and choose “lock”. Stick will lock automatically without entering password by removing.
- After successful locking a closed and orange colored lock will be displayed.



- If locking will not be executed with entering personal password, USB device will lock automatically by removing from drive.
- **Please note automatically lock will not work with a permanent unlocked stick.**

- Re-plugging in the USB device, the medium has to be unlocked again with entering personal password.
- To Change current password, chose “change password”.
- Enter your present and new password with repetition. Depending on chosen safety level of your personal password background will change the color.
1-3 tags – red = low security level
4-7 tags – yellow = mid. security level
From 8 tags – green = max. security level.



- Confirm with „OK“.
- For a permanent unlocking, chose “permanent unlock”.

Warning: now automatically unlock is deactivated!



DISA DIGITAL SAFETY GmbH

Lyoner Straße 48 ■ D-60528 Frankfurt am Main
 Managing Director: Uwe Bremeyer ■ HRB: 82548 AG Frankfurt / Main
 Tax no. 45 239 3840 1 ■ USt-ID Nr.: DE814955917
 Fortis Bank KTO-Nr.: 1120 1911 57 ■ BLZ 370 106 00
 SWIFT/BIC: GEBADE33 ■ IBAN: DE59 3701 0600 1120 1911 57

